

# MID:COM

MIDWEST COMPUTER REGISTER CORP.  
1605 170<sup>TH</sup> St. Box 376 HAMPTON, IA 50441

MANUFACTURERS OF ELECTRONIC FUEL REGISTERS  
PHONE 641/456-4847 FAX 641/456-4600

## Instructions to Update the E:Count Firmware

1. **Save the E:Count Settings.**
  - a. E169E (and newer) Standalone:
    - i. Print the Calibration Report (CALTKT) from the Delivery Menu – this will print all settings in the E:Count.
  - b. E168E and Older, or if using the E:Count with and 8000
    - i. Go through all menu settings (Calibration, Deliver, and Setup menus) and make a note of all settings.
  - c. Use the Midcom Matrix software to "Get All from E:Count".
    - i. Download and install the **Matrix Utility** from [www.midcomcorp.com](http://www.midcomcorp.com) if necessary.
    - ii. You may have to register the Matrix for a license before you can use it.
  - d. Use the Matrix software to "Get Calibration Info from E:Count".
  - e. Save the current Matrix settings to a known file.
2. **If Replacing the "SIP Stick" insert the new SIP Stick and skip to step #7, otherwise:**
  - a. Connect the "E:Count Programming Harness" from the serial port on your PC to the Programming Port on the E:Count.
  - b. The Programming Port is located on the Upper-Left corner of the E:Count when you are facing the back of the E:Count.
3. **Extract the 4 E:Count Firmware Upgrade files to a folder on your computer.**
  - a. KIT5K.EXE - the dos utility that communicates with the processor in the E:Count.
  - b. Exxxx.HEX - updated E:Count firmware (in Intel hex format)
  - c. Exxxx.BAT - batch file to run the update program
  - d. Exxxx.CMD - file of commands for the KIT5K dos utility
  - e. NOTE: If your COM port is \*not\* port 1, then you'll need to edit the .CMD file to reflect the correct COM port number (it's the COM command in that file).
4. **Unscrew the "PROGRAM" bolt of the E:Count.**
5. **If your computer is Windows XP skip to step #5b, otherwise:**
  - a. Vista/Win7/Win8: Download and install the **KIT6K Utility** from [www.midcomcorp.com](http://www.midcomcorp.com)
    - i. Click "Select CMD File" and browse to the folder where you extracted the .CMD file.
    - ii. Click "Open"; the update program will finish automatically.
  - b. XP Only: Run the "Windows Batch File"
    - i. Double-click the .BAT file; the update program will finish automatically.
6. **After the update is finished, screw the "PROGRAM" bolt of the E:Count in.**
  - a. The E:Count should reset (it may be necessary to reset several times).
  - b. Shut down the power to the E:Count each time you are prompted to do so.
7. **Reload the E:Count Settings.**
  - a. Load the Matrix file you saved earlier.
  - b. Use the Matrix software to "Send All to E:Count".
  - c. Unscrew the CALIBRATION BOLT, then screw it back in to temporarily enter Calibration Mode and then exit right back out – required to send calibration settings.
  - d. Use the Matrix software to "Send Calibration Info to E:Count".
  - e. Go through all menu settings (Calibration, Deliver, and Setup menus) and make any setting changes as necessary based on the previous Calibration Report or any notes you saved.

# MID:COM

MIDWEST COMPUTER REGISTER CORP.  
1605 170<sup>TH</sup> St. Box 376 HAMPTON, IA 50441


MANUFACTURERS OF ELECTRONIC FUEL REGISTERS  
PHONE 641/456-4847 FAX 641/456-4600

**E:Count Programming Harness (PN: 702-0073 \$40)** to Connect the Computer Directly to the **E:Count Programming Port** to update E:Count Firmware using either KIT5K or KIT6K software.

**E:Count Programming Harness**



**E:Count Programming Port**

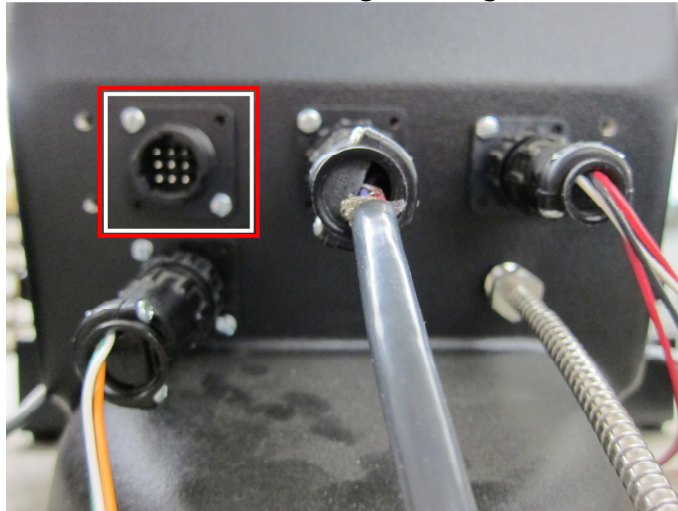

**Standard Straight-Through M/F RS-232 cable** to connect the laptop/computer to the **Serial1-Host Port** on the PCM for normal serial communications to either Register1 or Register2 using the Matrix or any-other laptop/computer software.

**Standard Straight-Through M/F RS-232 Cable**



**PCM Serial1-Host Port**

