

PRESS PRESET BUTTON TO CHANGE
PRESET BEFORE / DURING DELIVERY

Delivery Mode - In Delivery	
PRSESET	
AMOUNT	
▲▼◀▶	

PRESS MODE BUTTON TO DISPLAY
FLOW RATE DURING DELIVERY

Delivery Mode - In Delivery	
MODE	
FRXXXX	
Rate = xxxx units/minute	

PRESS MODE BUTTON TO ACCESS MENUS WHEN NOT IN DELIVERY

Delivery Menu

HOSEPK	OK	***
PRCODE	▲▼◀▶	
QOB	▲▼◀▶	***
TIMOVR	▲▼	***
SHIFT	print shift report	
DRIVER	▲▼◀▶	
TOTAL	◀▶	
DISVOL	▲▼	
TEMP F		
TEMP C		
CALTKT	print cal report	
SETUP	setup menu	
EXIT	delivery mode	

Setup Menu

NEWCOD	▲▼◀▶	
STAGE1	▲▼◀▶	
STAGE2	▲▼◀▶	
TIME	▲▼◀▶	
DATE	▲▼◀▶	
SALE	▲▼◀▶	
TRUCK	▲▼◀▶	
REGNUM	▲▼◀▶	
PRINTR	▲▼	
COPIES	▲▼◀▶	***
LOGOHT	▲▼◀▶	***
SS KEY	▲▼	
EMULAT	▲▼	
QOB MD	▲▼	
SWAUTH	▲▼	
HOSTFX	▲▼	
PKEYS	▼	
HOSEPK	▲▼	
EXIT	delivery mode	

Calibration Menu

PRCODE	▲▼◀▶
DISVOL	▲▼
ATOCAL	▲▼◀▶
CALFAC	▲▼◀▶
MPCAL	▲▼◀▶
TEMP F	▲▼
TEMP C	▲▼
TABLE#	value at temp
MRATIO	▲▼◀▶
PLSREV	▲▼
CHANNL	▲▼
FLODIR	▲▼
CMPTBL	▲▼◀▶
SERIAL	▲▼◀▶
TIMER	▲▼
REGNUM	▲▼◀▶
U TYPE	▲▼
UNITS	▲▼
PGROSS	▼
DECMAL	▲▼
AIRSEN	▲▼
PROBE	▲▼
BRKVLV	▲▼
DEMO	▲▼
EXIT	calibration mode

MID:COM E:Count
Menu Guide
Version: E180E0 English
September 15, 2015

Press & Hold keys until the desired item is shown
or until the desired action is taken.

Press & Hold <MODE> to cycle through
Menu Items.

Press & Hold <START/STOP> to select the
Menu Item for display and update.

Press & Hold <START/STOP> again to return to
the Menu Item selection.

Press & Hold <RIGHT ARROW> on Menu Items
to skip to EXIT.

Press & Hold <LEFT ARROW> on Deliver Menu
to skip to SETUP.

Press & Hold <LEFT ARROW> on Setup Menu
to skip to PRINTR.

Press & Hold <LEFT ARROW> on Calibrate Menu
to skip to REGNUM.

*** Displayed depending on configuration.