

PRESS PRESET BUTTON TO CHANGE
PRESET BEFORE / DURING DELIVERY

Delivery Mode - In Delivery

PRESET
AMOUNT
▲▼◀▶

PRESS MODE BUTTON TO DISPLAY
FLOW RATE DURING DELIVERY

Delivery Mode - In Delivery

MODE
FRXXXX

Rate = xxxx units/minute

PRESS MODE BUTTON TO ACCESS MENUS WHEN NOT IN DELIVERY

Delivery Menu

TOTAL	◀▶	
TIMOVR	▲▼	***
SHIFT	print shift report	
DISVOL	▲▼	
TEMP F		
TEMP C		
CALTKT	print cal report	
SETUP	setup menu	
EXIT	delivery mode	

Calibration Menu

PRCODE	
DISVOL	▲▼
ATOCAL	▲▼◀▶
CALFAC	▲▼◀▶
MPCAL	▲▼◀▶
TEMP F	▲▼
TEMP C	▲▼
TABLE#	value at temp
MRATIO	▲▼◀▶
PLSREV	▲▼
CHANNL	▲▼
FLODIR	▲▼
TMPCMP	▲▼
SERIAL	▲▼◀▶
TIMER	▲▼
U TYPE	▲▼
UNITS	▲▼
PRTGRS	▼
DECMAL	▲▼
AUX2	▼
BRKVLV	▼
DEMO	▲▼
EXIT	calibration mode

Setup Menu

NEWCOD	▲▼◀▶
STAGE1	▲▼◀▶
STAGE2	▲▼◀▶
TIME	▲▼◀▶
DATE	▲▼◀▶
SALE	▲▼◀▶
UNITID	▲▼◀▶
PRINTR	▲▼
COPIES	▲▼◀▶
EMULAT	▼
SS RST	▼
HWAUTH	▲▼
SWAUTH	▲▼
MODELK	▲▼
ACCCOD	▲▼
HOSTFX	▼
HOSSEL	▼
KEYSON	▼
EXIT	delivery mode

MID:COM E:Count LT/LTIS MCR-09D

Menu Guide

Version: L415E1 English

September 15, 2015

Press & Hold keys until the desired item is shown or until the desired action is taken.

Press & Hold <MODE> to cycle through Menu Items.

Press & Hold <START/STOP> to select the Menu Item for display and update.

Press & Hold <START/STOP> again to return to the Menu Item selection.

Press & Hold <RIGHT ARROW> on Menu Items to skip to EXIT.

Press & Hold <LEFT ARROW> on Deliver Menu to skip to SETUP.

Press & Hold <LEFT ARROW> on Setup Menu to skip to PRINTR.

Press & Hold <LEFT ARROW> on Calibrate Menu to skip to UNITS.

*** Displayed depending on configuration.