

PRESS PRESET BUTTON TO CHANGE PRESET BEFORE / DURING DELIVERY

Delivery Mode - In Delivery

PRSESET	MODE -->	PRSESET
AMOUNT		MONEY
▲▼◀▶		▲▼◀▶

Press MODE to set preset on Dollars

PRESS RIGHT-ARROW BUTTON TO CHANGE PRICE DURING DELIVERY

Delivery Mode - In Delivery

MONEY
PRICE
▲▼◀▶

PRESS MODE BUTTON TO DISPLAY FLOW RATE DURING DELIVERY

Delivery Mode - In Delivery

MODE
FRXXXX
Rate = xxxx units/minute

PRESS MODE BUTTON TO ACCESS MENUS WHEN NOT IN DELIVERY

Delivery Menu

HOSEPK	OK	***
PRCODE	▲▼◀▶	
QOB	▲▼◀▶	
MONEY	currency menu	***
TIMOVR	▲▼	***
SHIFT	print shift report	
DRIVER	▲▼◀▶	
TOTAL	◀▶	
DISVOL	▲▼	
TEMP F	view Fahrenheit	
TEMP C	view Celsius	
CALTKT	print cal report	
TANKID	▲▼◀▶	
SETUP	setup menu	
EXIT	delivery mode	

Currency Menu

PRICE	▲▼◀▶
TAX 1	▲▼◀▶
TXTYP1	▲▼
TAX 2	▲▼◀▶
TXTYP2	▲▼
TAXSUB	▲▼
DISCNT	▲▼◀▶
DSC TYP	▲▼
DSCDAY	▲▼◀▶
PRCADJ	▲▼◀▶, ▲▼
EXIT	delivery mode

MID:COM E:Count
Menu Guide
Version: E202EA English
January 14, 2021

Press & Hold keys until the desired item is shown or until the desired action is taken.

Press & Hold <MODE> to cycle through Menu Items.

Press & Hold <START/STOP> to select the Menu Item for display and update.

Press & Hold <START/STOP> again to return to the Menu Item selection.

Press & Hold <RIGHT ARROW> on Menu Items to skip to EXIT.

Press & Hold <LEFT ARROW> on Delivery Menu to skip to SETUP.

Press & Hold <LEFT ARROW> on Setup Menu to skip to PRINTR.

Press & Hold <LEFT ARROW> on Calibrate Menu to skip to REGNUM.

*** Displayed depending on configuration.

Setup Menu

NEWCOD	▲▼◀▶
STAGE1	▲▼◀▶
STAGE2	▲▼◀▶
TIME	▲▼◀▶
DATE	▲▼◀▶
SALE	▲▼◀▶
TRUCK	▲▼◀▶
CURNCY	▼
REGNUM	▲▼◀▶
PRINTR	▲▼
COPIES	▲▼◀▶
SS KEY	▼
EMULAT	▼
SWAUTH	▲▼
QOB MD	▲▼
HOSTFX	▼
P KEYS	▼
PS RQD	▲▼
HOSEPK	▲▼
INITNV	initialize novram
TRNCAT	▲▼
6501PF	▲▼
EXIT	delivery mode

Calibration Menu

PRCODE	▲▼◀▶
DISVOL	▲▼
ATOCAL	▲▼◀▶
CALFAC	▲▼◀▶
TEMP F	▲▼
TEMP C	▲▼
TABLE#	value at temp
MRATIO	▲▼◀▶
PLSREV	▲▼
CHANNEL	▲▼
FLODIR	▲▼
CMPTBL	▲▼◀▶
SERIAL	▲▼◀▶
TIMER	▼
REGNUM	▲▼◀▶
U TYPE	▲▼
UNITS	▲▼
PGROSS	▼
DECMAL	▲▼
AIRSEN	▼
PROBE	▲▼
BRKVLV	▲▼
DEMO	▲▼
EXIT	calibration mode